

THIEL CS6 & CS7.2

Unpacking and Repacking Instructions

Important: Because of the speaker's size and weight, at least two people are needed to unpack and repack the speaker.

All references to the speaker's right and left sides are made from the orientation of facing the rear of the speaker. The rear of the speaker carton has the serial number and finish information printed on it.

UNPACKING

If your speakers' wooden crates have already been removed, proceed to step 3.

- 1 Remove speaker crates from shipping pallet and place them on their right sides with the "Up" arrows pointing up.
- 2 Remove screws from both plywood end caps and remove wood corner protectors from the outside of carton.
- 3 Stand speaker (in carton) upright. Open the top carton flaps.
- 4 Remove the plywood top pack.
- 5 Lay the speaker (in the carton) on its back. Open the bottom carton flaps and fold them out.
- 6 From the top end of the speaker: remove the blue foam from the right side of the speaker. Then remove the two front corner protectors. (Note: the corner protectors will be marked "L" for left and "R" for right on the top of each protector.)
- 7 From the bottom end of the speaker: remove the plywood bottom pack. Grip the plastic bag and pull the speaker from the bottom of the carton, allowing the top 12" of the speaker to remain on the rear corner pads inside the carton. Then grip the speaker where the corner pad ends and lift the speaker, pulling the carton away at the top.
- 8 Stand speaker upright and remove plastic bag and white foam sheet wrapping.

Repacking instructions on back page

REPACKING

If it is necessary to repack the speakers, it must be done properly to avoid shipping damage. We recommend palletizing the two speaker cartons prior to shipping. If the original palletizing materials are not available, contact your shipper or the THIEL factory about palletizing.

- 1 Wrap the speaker top and bottom (around the base) with the white foam sheet wrapping. Cover speaker with the protective plastic bag
- 2 Place the empty carton on the floor with the front side up. Fold the carton end flaps outward.
- 3 Lay the two rear foam stripped corner protectors on the floor in front of the open carton bottom with the ends of the protectors laying just inside the carton bottom. (Note: the ends of the corners are marked "L" for left and "R" for right. Make sure these ends face toward the top of the carton and that the left protector will be under the *speaker's* left side.)
- 4 Lay the speaker down on its back and on top of the corner protectors. Make sure the top of the speaker is oriented toward the top of the carton.
- 5 Slide the speaker and the rear corner protectors into the bottom of the carton.
- 6 Place the plywood bottom pack into the carton bottom against the base of the speaker. Be sure the small foam block is toward the front of the speaker to protect the front of the base.
- 7 Close the bottom carton flaps and tape securely.
- 8 Stand the speaker in the carton upright.
- 9 Remove the two rear corner protectors from the top of the carton.
- 10 Install the *front* right corner protector (marked R on its top end).
- 11 Slide both the right rear corner and the blue foam into the right side of the carton together.
- 12 Install the left rear and left front corner protectors into the carton (marked L on their top ends).
- 13 Install plywood top pack, making sure the pack's wood blocks are inside both front corners.
- 14 Close the top flaps and tape securely
- 15 Place the four wooden corners around the outside of the carton, then attach the top plywood end cap with screws.
- 16 Lay carton on its right side and attach the bottom plywood end cap to the wooden corners with screws.
- 17 Place cartons on shipping pallet with their right sides down and so the speakers face each other.
- 18 Band the cartons to the pallet.